






What to do if...

List of Warning/Indicator Lights


Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



-  (U.S.A.)
Brake system warning light (red indicator)
-  (Canada)



Stop the vehicle immediately.



-  Charging system warning light
-  Low engine oil pressure warning light
-  High coolant temperature warning light



Have the vehicle inspected immediately.



-  (U.S.A.)
Malfunction indicator lamp

 (Canada)
-  Pre-collision system warning light (if equipped)
(Flashes)

 Slip indicator light
(Comes on)
-  SRS warning light

 Brake system warning light (yellow indicator)
-  (U.S.A.)
ABS warning light

 Automatic headlight leveling system warning light (if equipped)
-  (Canada)

 Tire pressure warning light
(Blinking and then continuously on)
-  Electric power steering system warning light

For further information, refer to the Owner's Manual.

What to do if...

Follow the correction procedures.



Open door warning light



Master warning light



Low fuel level warning light



Tire pressure warning light*

(Illuminates without blinking)



Seat belt reminder light

See the Owner's Manual



Turn signal indicator



"SPORT MODE" indicator



Headlight indicator (U.S.A.)



Cruise control indicator



Tail light indicator (Canada)



Radar cruise control indicator (if equipped)



Headlight high beam indicator



Intuitive parking assist indicator (if equipped)



Front fog light indicator (if equipped)



Slip indicator

(Flashes)



"READY" indicator



Pre-collision system warning light (if equipped)

(Flashes faster)



EV indicator



Shift position indicators



EV drive mode indicator



"ECO MODE" indicator



"AIR BAG ON/OFF" indicator

For further information, refer to the Owner's Manual.

*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

What to do if...

If the electronic key does not operate properly

Unlocking and locking the doors



Use the mechanical key in order to perform the following operations:

- 1** Locks all the doors
- 2** Closes the windows* (turn and hold)
- 3** Unlocks the door

Turning the key rearward unlocks the driver's door. Turning the key once again within 3 seconds unlocks the other doors.

- 4** Opens the windows* (turn and hold)

*: These settings must be customized at your Lexus dealer.

What to do if...

■ Starting the hybrid system



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "POWER" switch.
If any of the doors is opened or closed while the key is being touched to the switch, an alarm will sound to indicate that the start function cannot detect the electronic key.
- 3 Press the "POWER" switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the hybrid system still cannot be operated, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

What to do if...



If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system.

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.